PULSO-DESK

ACCESSORIES

Desk/Wall Support for PULSO-4 & PULSO-6



PRODUCT OVERVIEW

PULSO-DESK is a desk/wall support specifically designed for the Ecler PULSO-4 and PULSO-6 models, enabling easy installation on desks or walls where traditional integration is not possible. Engineered for stability and aesthetic integration, it ensures optimal positioning and accessibility in professional audio environments.

KEY FEATURES

- Dual installation options: compatible with both desk and wall mounting.
- Precision design: Maintains full access to RJ45 connectors and proper logo orientation.
- Premium build.
- Professional finish.
- Available in black (RAL 9005).
- Compatible with the Ecler PULSO-4 and PULSO-6 models.

APPLICATIONS

- **PULSO-4**
- **PULSO-6**



PULSO-4




PULSO-6

TECHNICAL SPECIFICATIONS

PULSO-DESK


PHYSICAL	
Weight	0.195 kg / 0.43 lb
Dimensions (WxHxD)	84.6 × 87.7 × 87.6 mm. / 3.33 x 3.45 x 3.44 in.
Shipping dimensions (WxHxD)	100 x 100 x 100 mm / 3.94 x 3.94 x 3.94 in.
Shipping weight	0.25 kg / 0.55 lb
Finished colour	Black (RAL 9005)
Material	ABS Plastic / Steel

MECHANICAL DIAGRAM

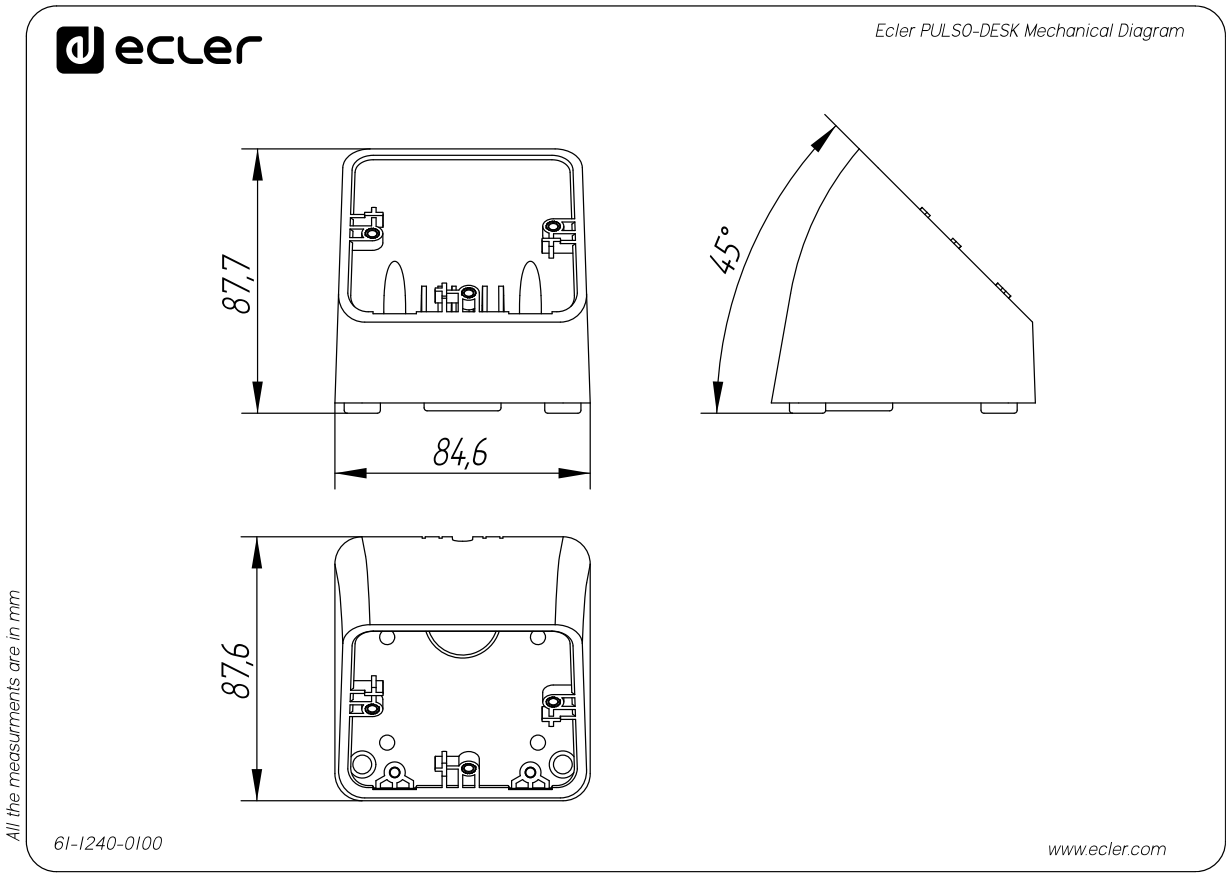


DESKTOP INSTALLATION DIAGRAM

1

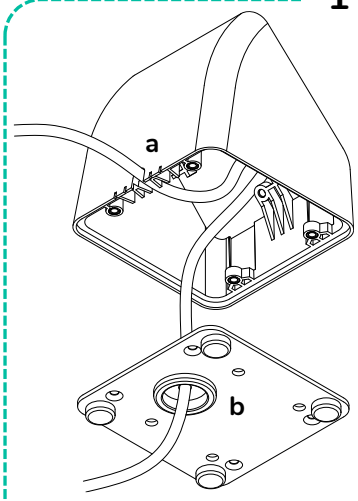


Route the Ethernet RJ45 cable and the power cable (if required) through the side entry (a) before the bottom plate is secured or through the cable entry in the bottom plate (b).

If additional space is required for cables routed through the side entry, up to two additional openings (c) can be created by carefully cutting away one or both of the tabs shown in the diagram using small cutting pliers.

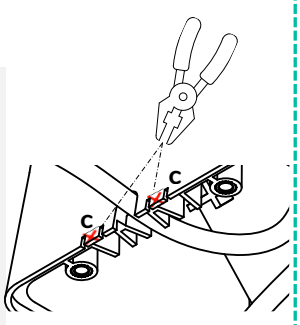


2

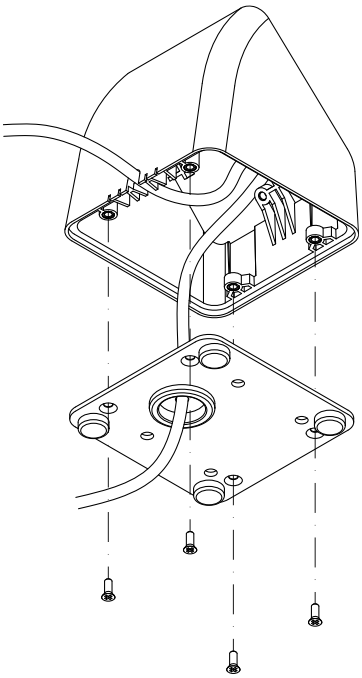

Secure the bottom plate to the support using four of the supplied screws.


3

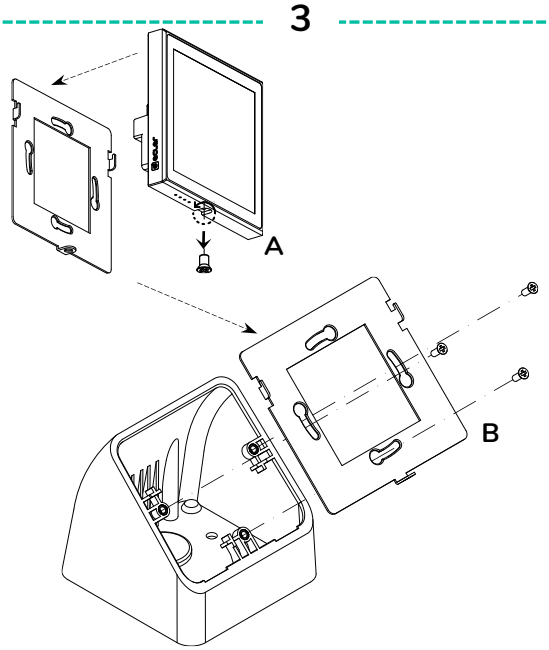

A. On the PULSO-4 or PULSO-6 device, unscrew the screw securing the original wall-mount plate and remove the plate.

B. Secure the removed plate to the PULSO-DESK base support using the remaining three supplied screws.


4

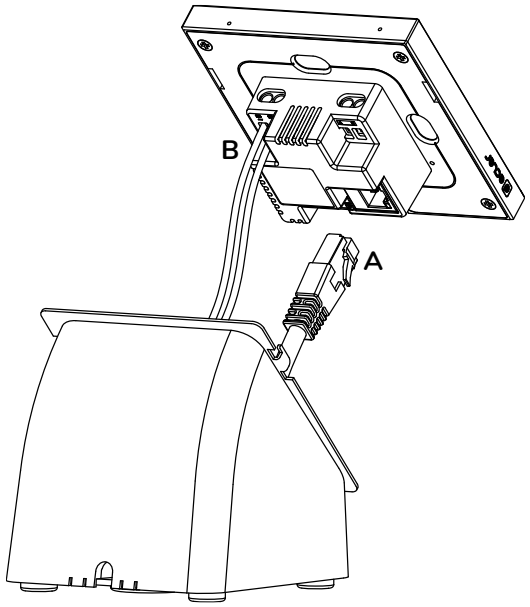

A. Connect the Ethernet RJ45 cable to the PULSO device.


B. If required, also connect the power cable to the device.

5

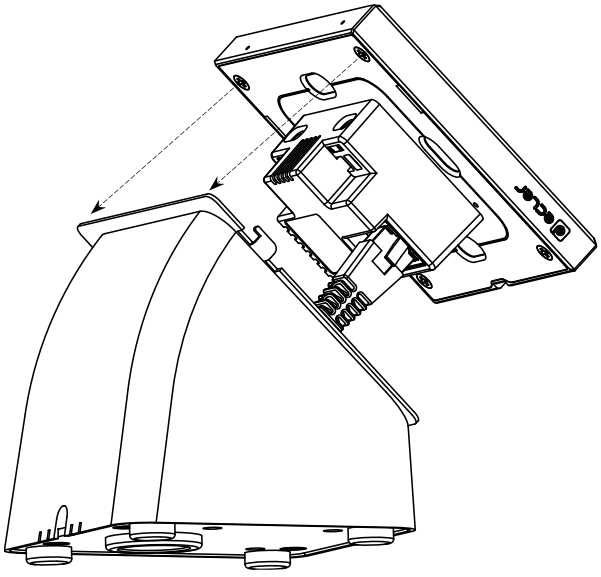


Place the PULSO-4 or PULSO-6 device onto the PULSO-DESK support.

6

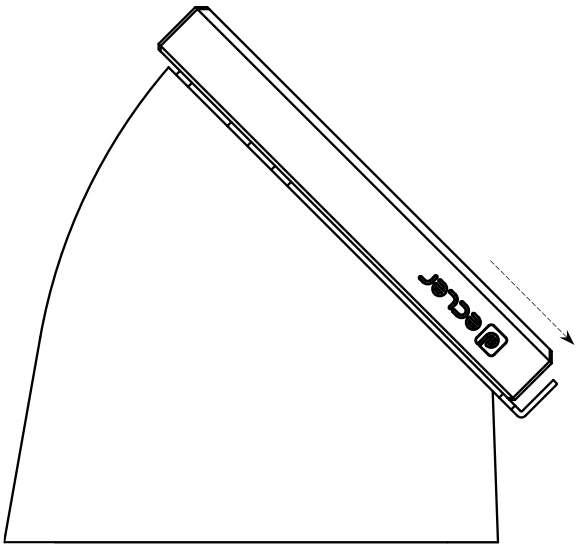

Slide the PULSO device downward along the support until it reaches the end position.


7

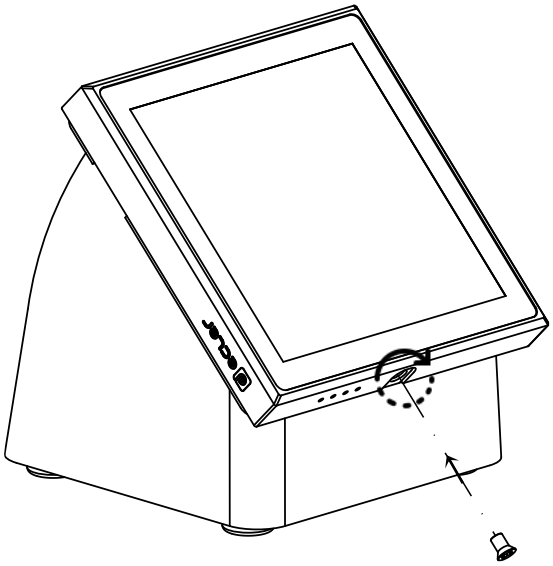

Secure the device to the support using the screw previously removed from the device as shown in step 3A.


WALL-MOUNT INSTALLATION DIAGRAM

1

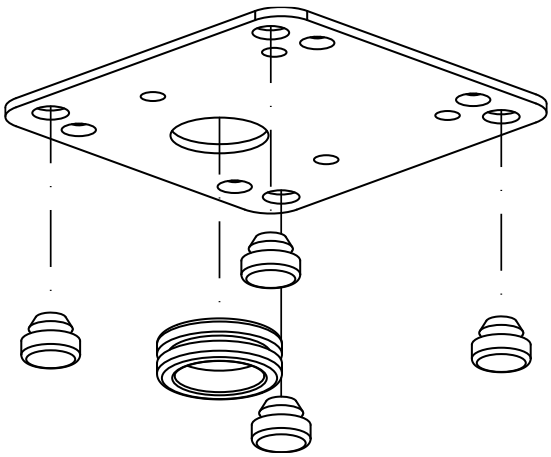


Remove the rubber feet and the cable-entry rubber grommet from the bottom plate.

2

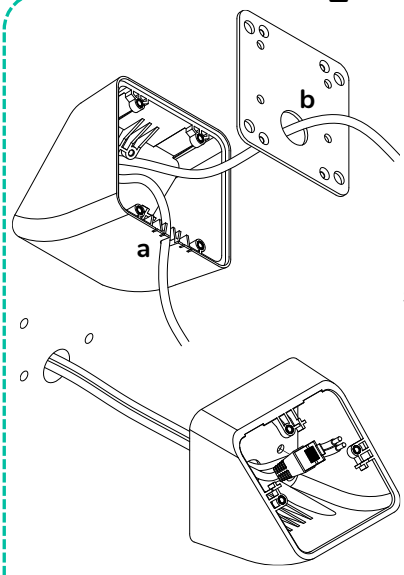


Route the Ethernet RJ45 cable and the power cable (if required) through the side entry (a) before the bottom plate is secured or through the cable entry in the bottom plate (b).

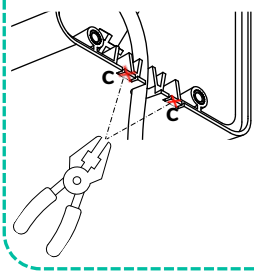


If additional space is required for cables routed through the side entry, up to two additional openings (c) can be created by carefully cutting away one or both of the tabs shown in the diagram using small cutting pliers.

3

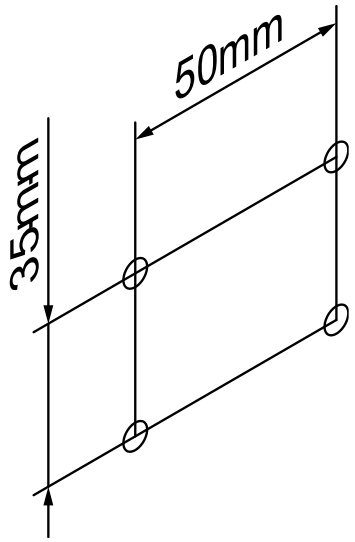


Drill four holes in the wall according to the dimensions shown above or use the bottom plate as a drilling template.

4

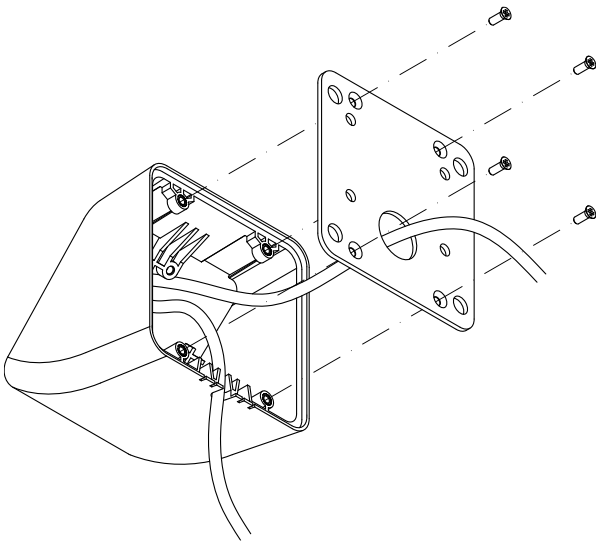


Secure the bottom plate to the support using four of the supplied screws.

5

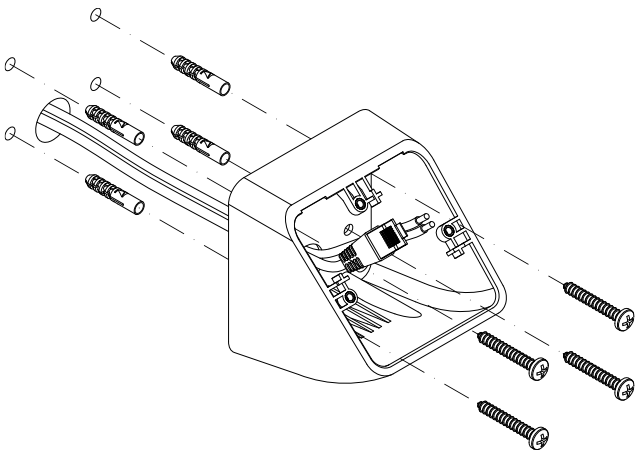

Insert four suitable wall plugs (not supplied), then secure the wall support to the wall using four screws (not supplied).


6

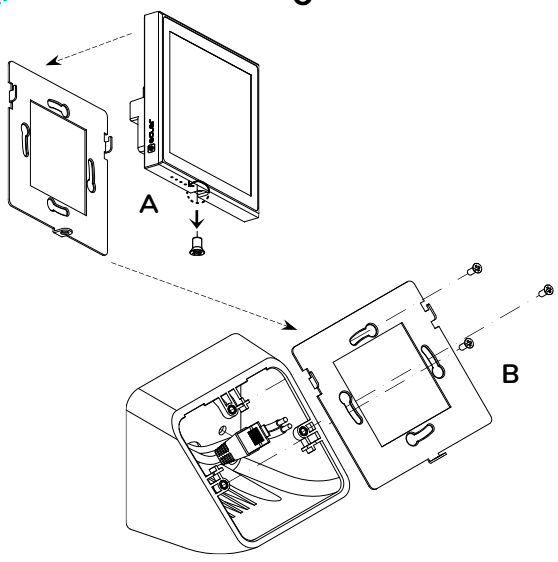

A. On the PULSO-4 or PULSO-6 device, unscrew the screw securing the original wall-mount plate and remove the plate.

B. Secure the removed plate to the PULSO-DESK base support using the remaining three supplied screws.


7

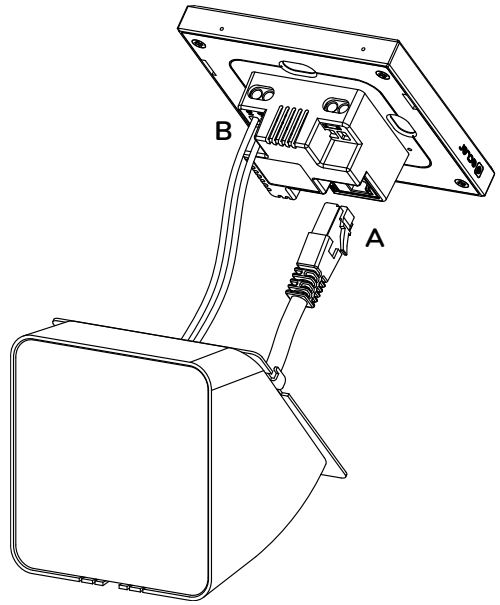

A. Connect the Ethernet RJ45 cable t to the PULSO-4 or PULSO-6 device.


B. If required, also connect the power cable to the device.

8

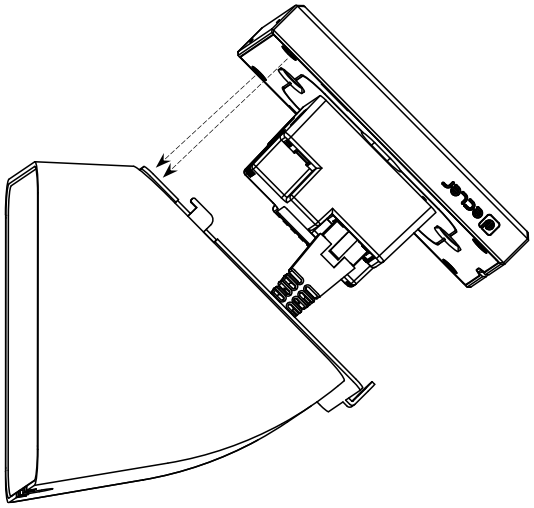


Place the PULSO-4 or PULSO-6 device onto the PULSO-DESK support.

9

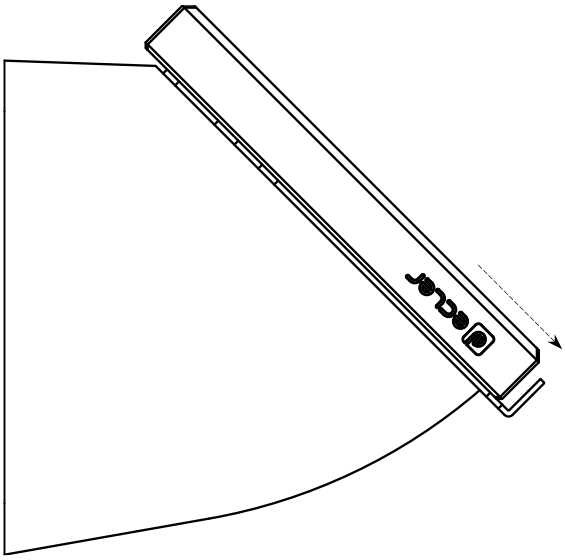

Slide the PULSO device downward along the support until it reaches the end position.

10

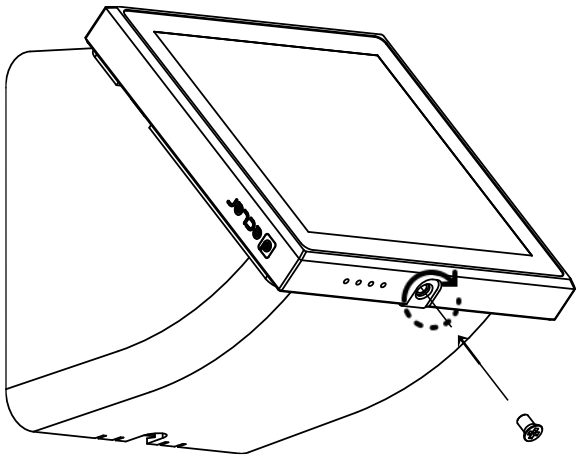

Secure the device to the support using the screw previously removed from the device as shown in step 6A.