

EASYFIX

ACCESSORIES

Rack Mount Kit



* Devices not included

PRODUCT OVERVIEW

EASYFIX is a rack-mount accessory that allows to mount two half-width RU devices in 1 standard width RU space. In addition, 2 side handles - Left & Right- are included to facilitate easier handling and installation of the device.

KEY FEATURES

- Simply and quick installation.
- Allows two half-width RU devices to be mounted in a single 1RU rack space for convenient installation and handling.
- 2 Side handles -Left & Right- included for enhanced usability.

COMPATIBLE PRODUCTS

- [BOB-04](#)



- [BOB-22](#)



TECHNICAL SPECIFICATIONS



EASYFIX

Physical		
Weight	▪ EASYFIX: 10gr / 0.02 lb. ▪ HANDLES (2): 55gr / 0.12 lb.	
Dimensions (WxHxD)	▪ EASYFIX: 28 x 31 x 1.50 mm / 1.10 x 1.22 x 0.06 in. ▪ HANDLES (each one): 25.25 x 44 x 61.11 mm / 0.99 x 1.73 x 2.41 in.	
Shipping dimensions (WxH)	200 x 80 mm / 7.87 x 3.15 in.	
Shipping weight	70 gr / 0.15 lb	
Material	▪ EASYFIX: Zincor ▪ HANDLES: Aluminium	
Included accessories	1 EASYFIX, 4x screws, 2x M3 Fixing terminals, 2x Side handles (Left-Right).	

MECHANICAL DIAGRAM



Ecler EASYFIX Mechanical Diagram

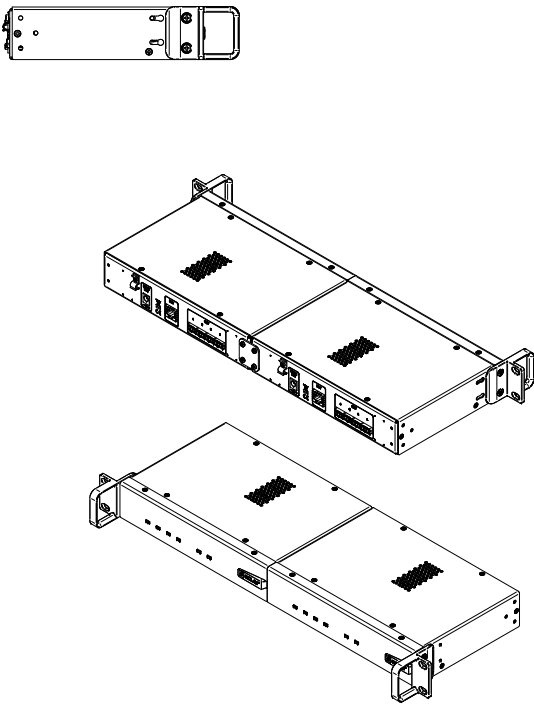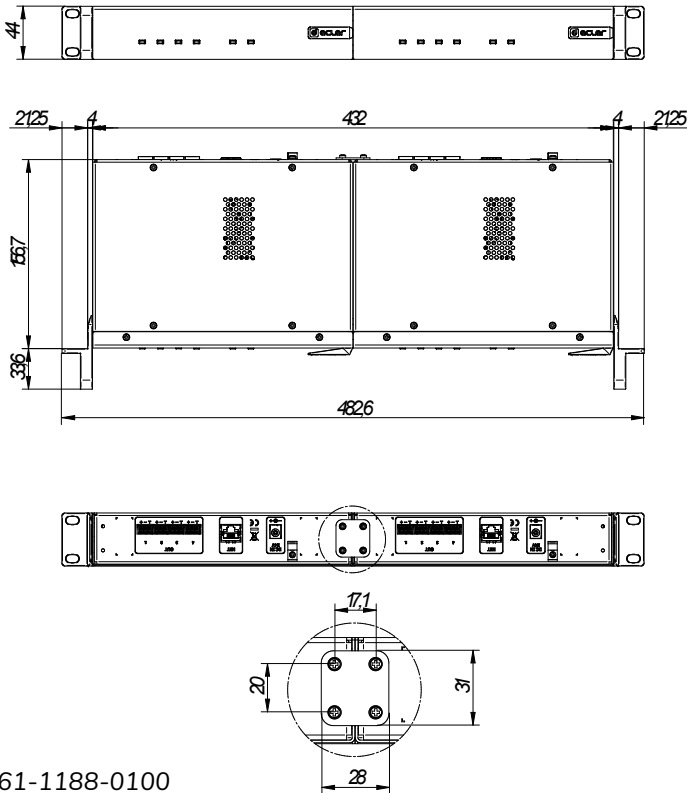

All the measurements are in mm

61-1188-0100

www.ecler.com

EASYFIX MOUNTING DIAGRAM


1

Ensure all required parts for assembly are included:

- ✓ 1x Half Rear union Plate EASYFIX.
- ✓ 4x Screws.
- ✓ 2x M3 Fixing Terminals.

2


Prepare the half-width RU Unit 1*.

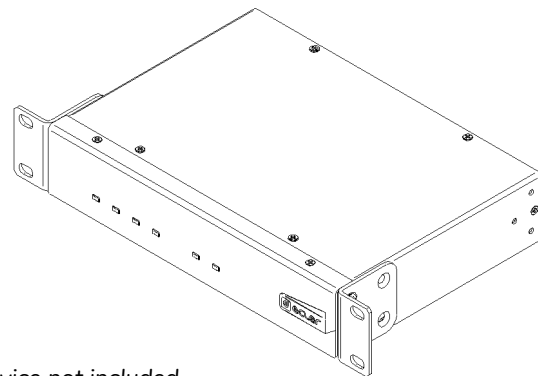

* Device not included

3


Remove the rack bracket and associated screws from the right side of Unit 1*.

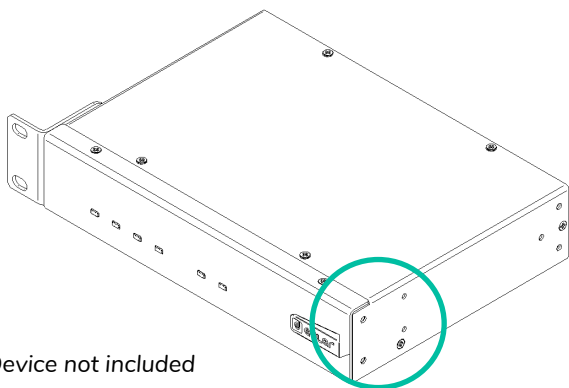

* Device not included

4


Insert the two M3 fixing terminals into the specified threaded holes in the right side of Unit 1*.

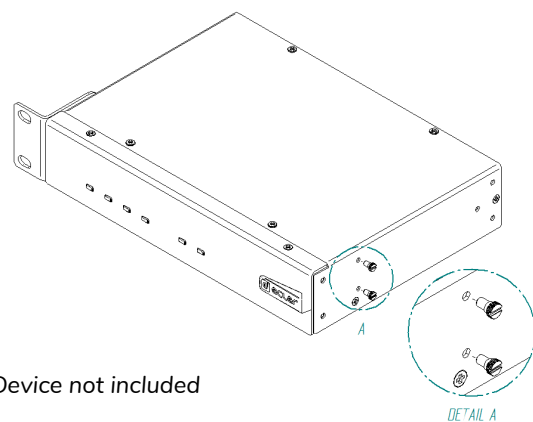

* Device not included

5


Take half-width RU Unit 2* and remove the rack bracket and associated screws from the left side.

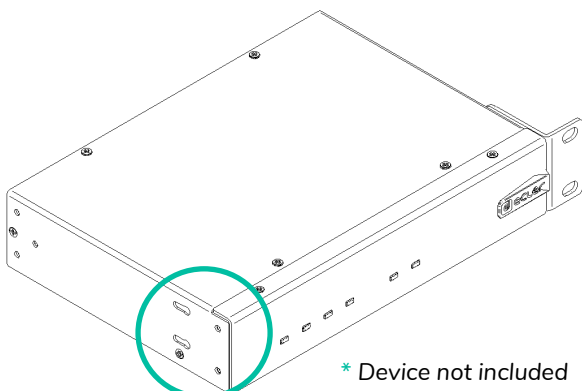

* Device not included

6


Place both units side by side, ensuring that the M3 fixing terminals on the right side of Unit 1* align with the large holes in the slots on the left side of Unit 2*.

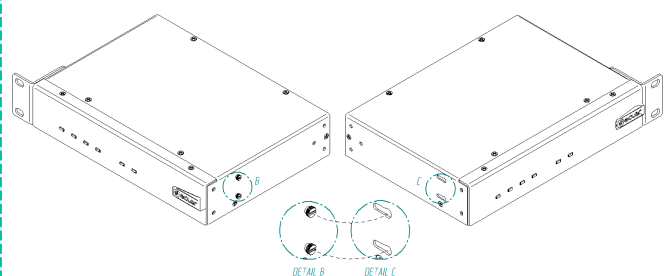

* Devices not included

7


Slide the units laterally (step1) and the forward (step2) so that the M3 fixing terminals fit into the slots of Unit 2*.

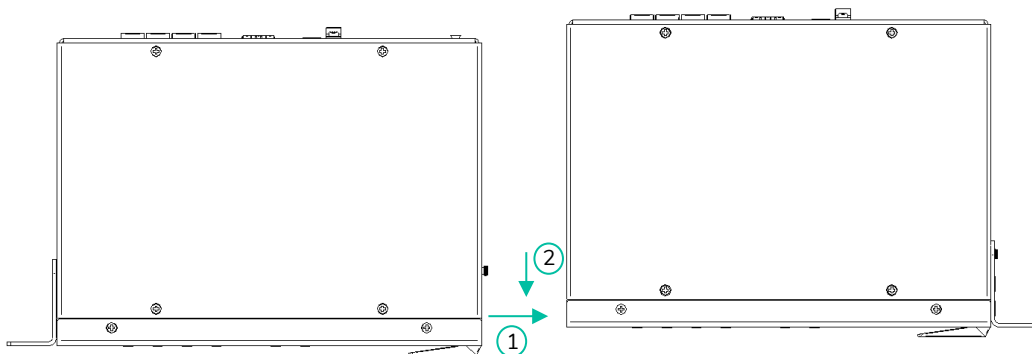

* Devices not included

8


Secure the connecting piece at the back using the 4 screws provided.

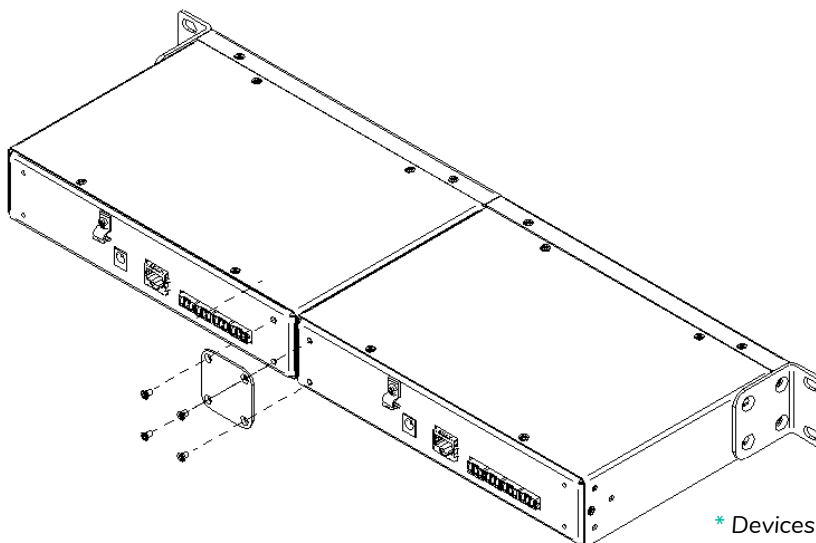

* Devices not included

9

Ensure both units are firmly joined, and all screws are tightened.

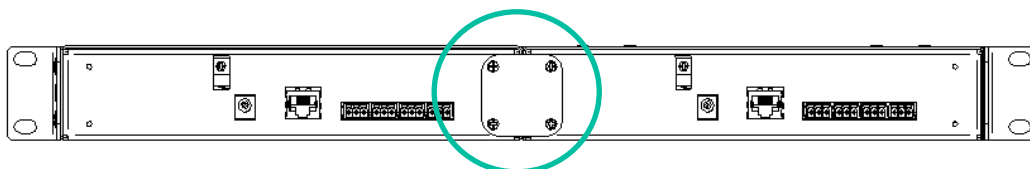

* Devices not included

SIDE HANDLES MOUNTING DIAGRAM


1

Required Parts for Assembly:

- ✓ 2x Handles (Left & Right) - included.
- ✓ 4x Screws (not included).

2


After mounting the Half Rear union Plate EASYFIX, as described above, unscrew the three screws from each side ear bracket.

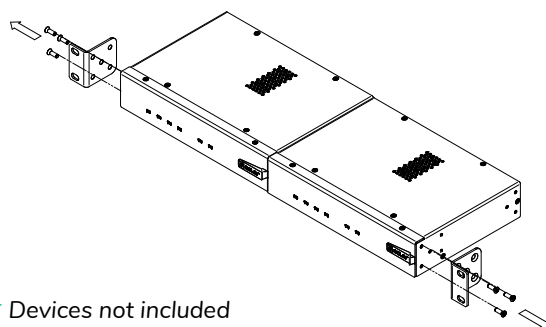

* Devices not included


3

To attach the supplied handles (left & right), use 4 of the screws you previously removed - 2 screws for each handle).

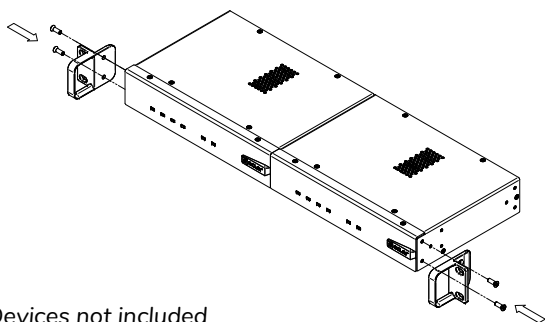

* Devices not included

4

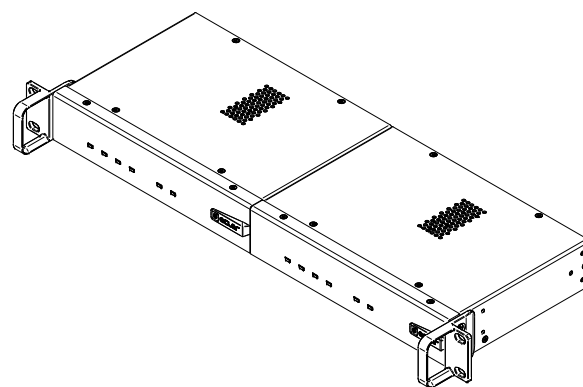

* Devices not included